
Installation Instructions


Alternative Installation Methods

Stud Anchors (Included with large panels, otherwise upon request)

The panel outer frame can be **hung in the rough framed opening** before the drywall is in place by using the Stud Anchors. Stud Anchors clip into the outer frame and are screwed or fixed to the framework. **After drywall is fitted around the frame, the frame must be attached as shown in the next section.**


Stud **anchors are an** installation **aid** only.

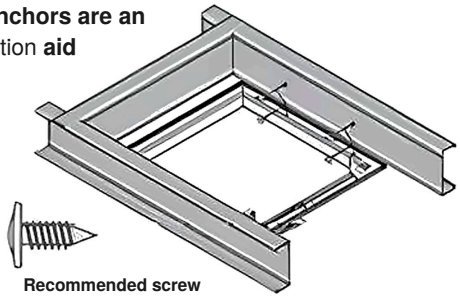

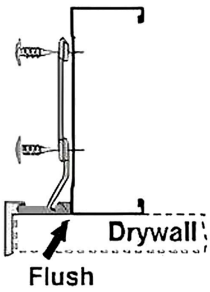


During Drywall Installation

The access panel outer frame can be located resting on the back of the drywall **as the drywall is being installed.** If possible, avoid putting joints at the corners. **The frame must be attached as shown in the next section.**

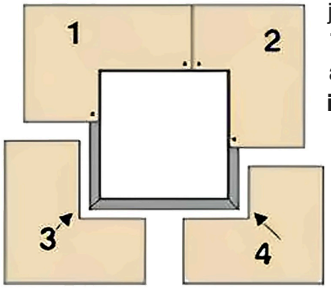


Outer Frame Installation and Panel Finishing

Pass the frame through the opening into position (or locate with alternative method) so outer frame rests on back of drywall. **Ensure the frame is straight and square.** Screw through the drywall into the frame of the access panel. **Correct fastener spacing must be followed.**

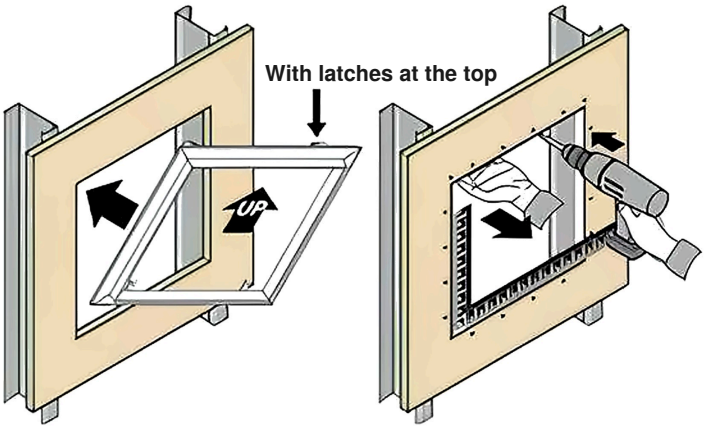



***Important Fastener Placement**

At the latch side only, a screw should be fitted in line with the edge of the frame. It will go through the steel corner brackets. If multiple latches, place fasteners through the base of all latch brackets. Use extra screws **on** latch side.

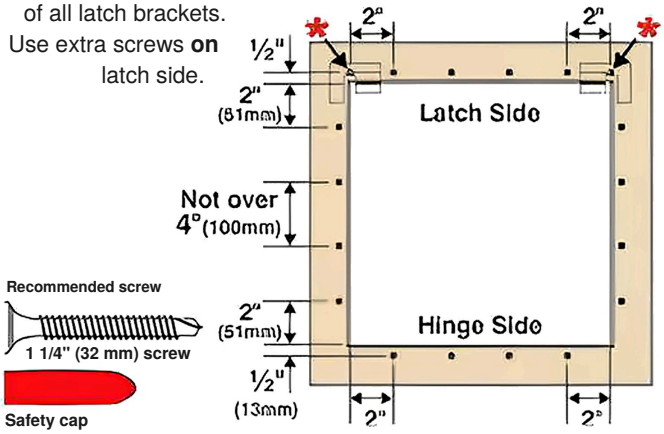



Insert door leaf and test function. Remove. Apply filler into any gaps around the outer frame, filling to the level of the raised edge. Apply filler to the door leaf. Sand and fill until desired finish is achieved. Finished height must not be higher than edge of outer frame and door leaf frame. Setting-type compound is recommended for the first coat. Clean excess filler and dust from frame with a damp cloth.

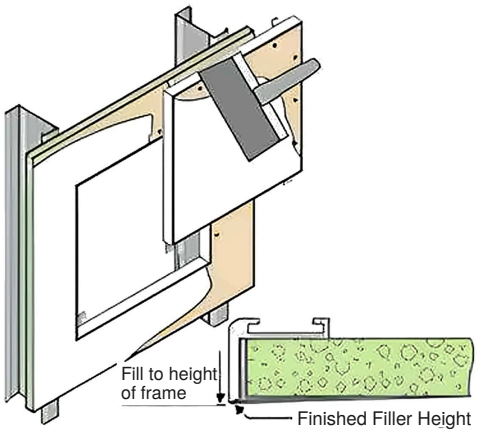

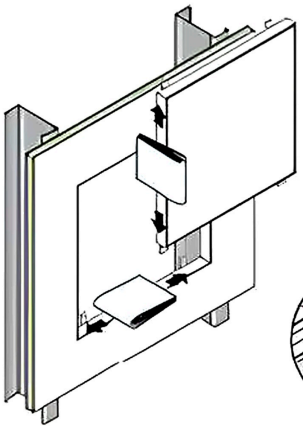

Prime and paint together or separately. Attach the safety cable when complete.

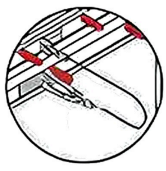

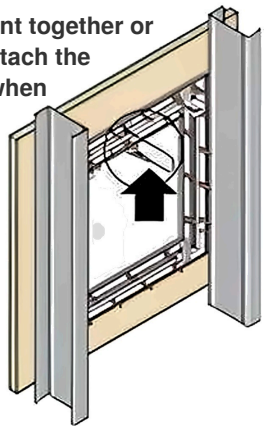

DALMA FALSE CEILING MANUFACTURING LLC